


# 541-8005 Roof Instructions

Figure 4


## Step 1

Roof Section  
(White part, bottom side shown)  
Not cuts are needed for this kit.

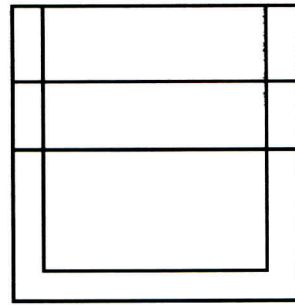


## Step 2

Cut the parts shown below off of the spure.  
Note: Install the Roof Trim ( Center ) on last.  
Some filing with an emory board will be needed.

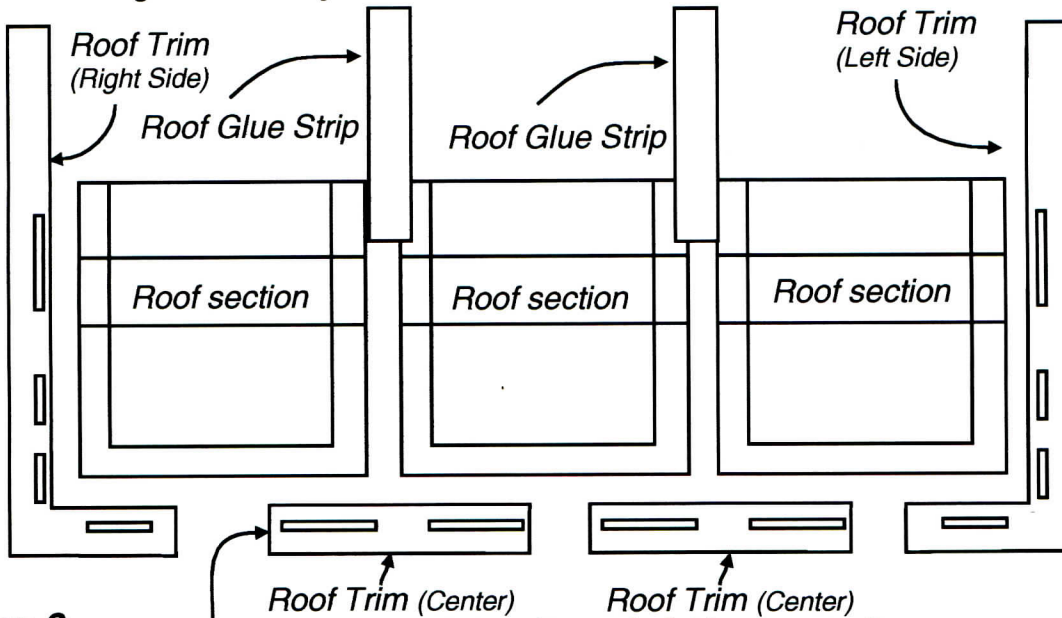

## Step 3

Remove this tab on each end and file smooth  
Now cut off the extra lengths so that your part looks like this.  
Note: Leave a little long then file down smooth.

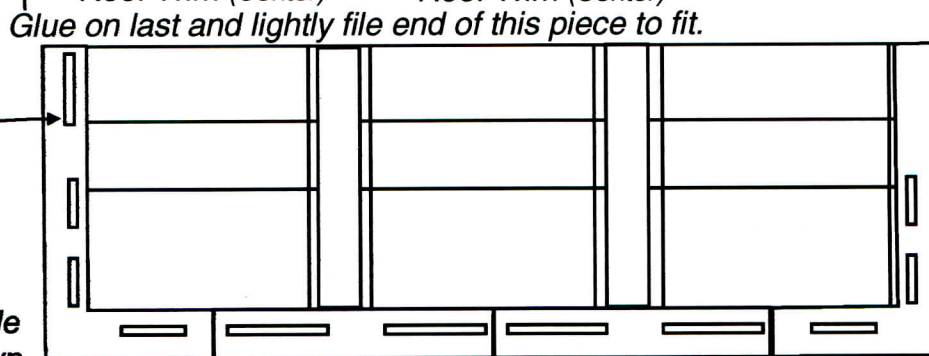

## Step 4

Glue the roof sections to the roof ridges as shown.  
Note: Be sure the roof dries with the same slope as the roof ridge.

