


541-8011 Roof Instructions

Figure 4

Step 1

Long Roof Section
(White part, bottom side shown)
No cuts are needed for this kit.




Step 2

Cut the parts shown below off of the spure.
Note: Install the Roof Trim (Center) on last.
Some filing with an emery board will be needed.

Roof Trim
(Right Side)

Roof Trim
(Left Side)

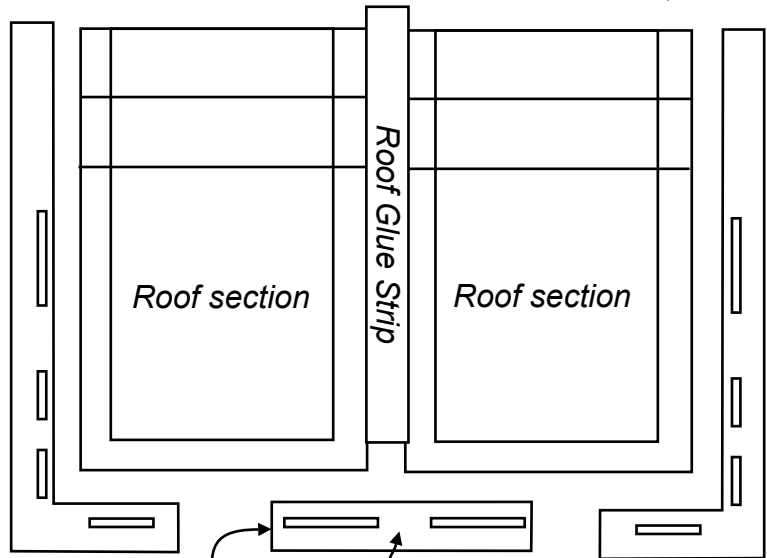


Roof Trim (Center)

Glue on last and lightly file end of this piece to fit.

Step 3

These drawings
not to scale

File off the extra
length so that your
part looks like this.

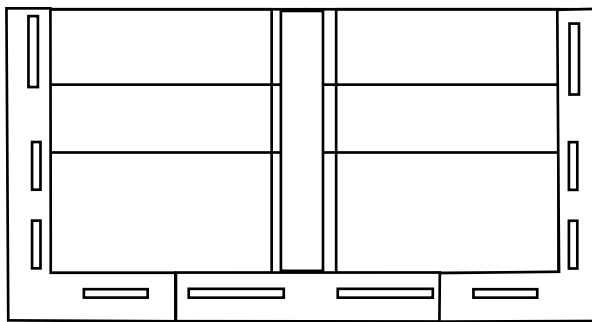

Step 4

These drawings
not to scale

Glue the roof
sections to the
roof ridges as
Shown.

Note: Be sure
the roof dries
with the same
slope as the
roof ridge.

